# Home Decorators

Collection

HDC# 08039 MFG# TW-18412IY
SOUTHPORT 6 DOOR STORAGE CBNT 60"Hx48"Wx17"D

## ASSEMBLY INSTRUCTIONS

Note: Before assembly, please be sure to work on a soft, flat surface to avoid any damage to the finish.

Made In China

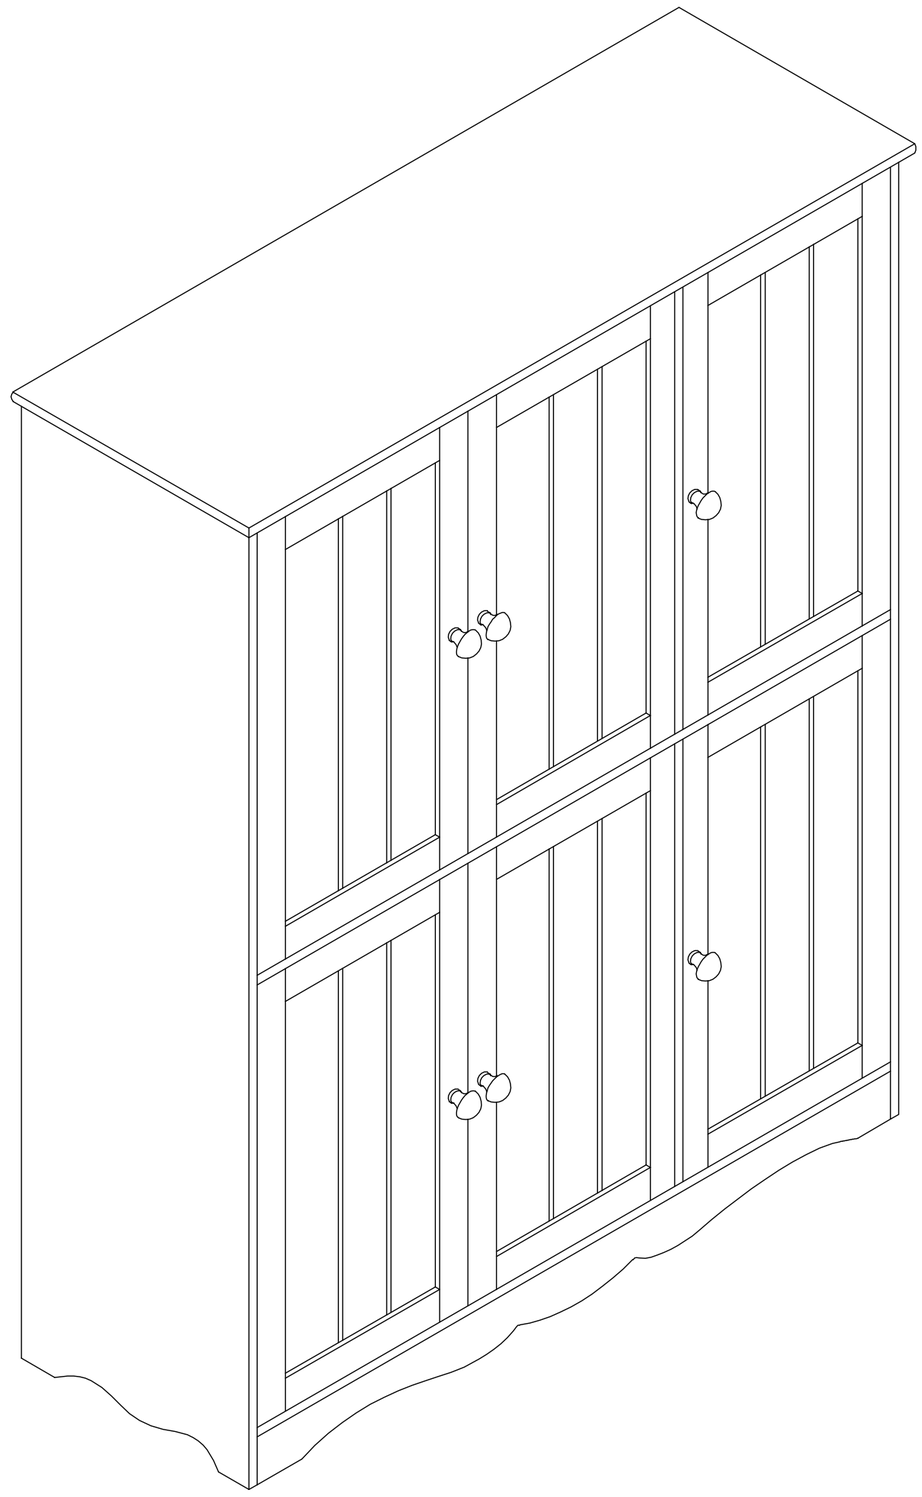

# *BEFORE ASSEMBLY*

**IMPORTANT NOTE:** READ CAREFULLY BEFORE ASSEMBLY TO PREVENT DAMAGE TO PARTS. Following instruction listed below in the proper sequence as numbered to assure fast, easy and correct assembly.

## ASSEMBLY TOOLS REQUIRED

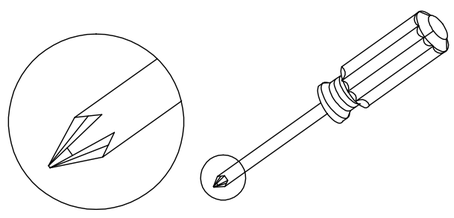

"+"Screw driver

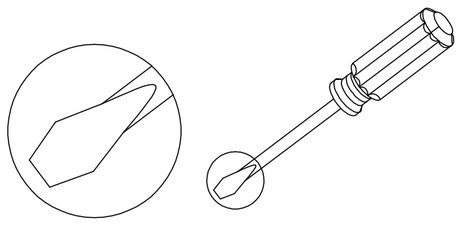

"-"Screw driver

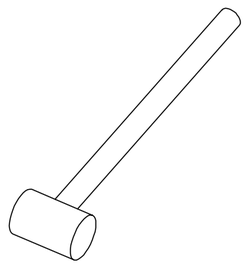

Rubber Mallet

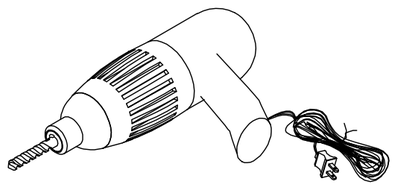

Electric drill

## *WOODEN DOWEL INSTALLATION PROCEDURE*

(1) FILL HOLE 1/4 FULL OF GLUE.
(2) GENTLY TAP DOWEL INTO HOLE
WITH RUBBER MALLET OR USE HAND
PRESS IN.
DO NOT USE HAMMER
(3) WIPE AWAY EXCESS GLUE.

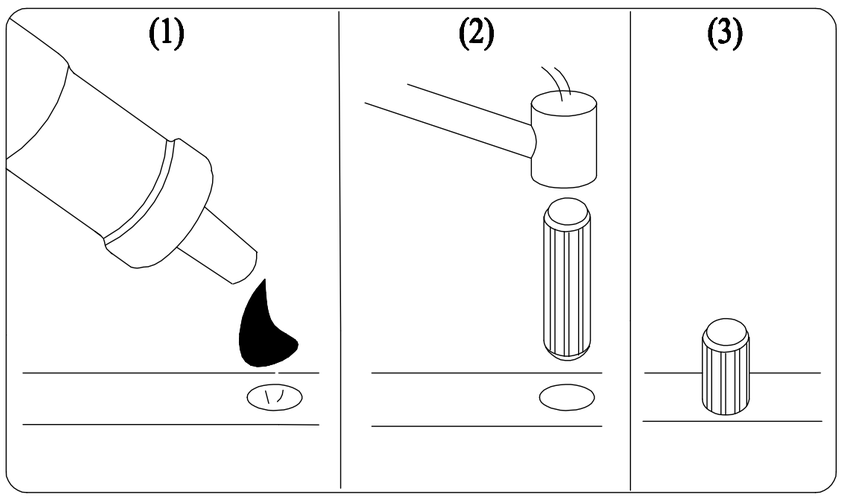


## *HIDDEN CONNECTOR ASSEMBLY TECHNIQUES FOR LOCK NUT & LOCK PIN*

1 SET INCLUDES: (C) CAM-LOCK 1PC. (A) CAM BOLT 1PC.
TOOL NEEDED: ″+″ SCREW DRIVER
STEP 1: SCREW CAM BOLT (A) ONTO PRE-SET PLASTIC NUT ON PANEL. USE A ″+″ SCREW-DRIVER FOR TIGHTENING. ATTENTION: DO NOT OVER TIGHTEN THE CAM BOLT (A).
STEP 2: ATTACH BOTH PANELS, MAKE SURE YOU HAVE INSERTED THE CAM BOLT TO THE VERY DEPTH OF THE HOLE WITH RUBBER MALLET GENTLY, CAUTION: DO NOT USE HAMMER. THEN INSERT CAM-LOCK (C) INTO PRE-DRILLED HOLE ON PANEL, MAKE SURE THE ARROW ON CAM-LOCK (C) SET IN PANEL POINT TOWARD THE HOLE INTO WHICH THE CAM BOLT (A) HAS BEEN INSERTED AND INSERTED THE CAM-LOCK (C) TO THE VERY DEPTH OF THE HOLE.
STEP 3: ROTATE THE CAM-LOCK (C) CLOCKWISE TO SECURE CAM BOLT (A) BY TIGHTENING WITH A ″+″ SCREWDRIVER.

DETAIL STEP PLEASE SEE THE BELOW PICTURE.

## VERTICAL CONNECTION

(1)

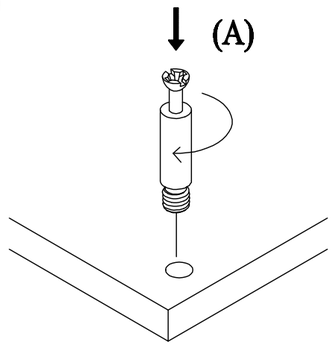


(2)

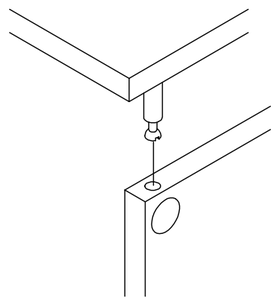

(3)

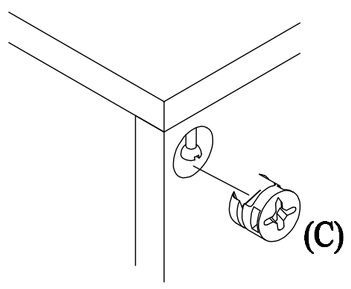


(4)

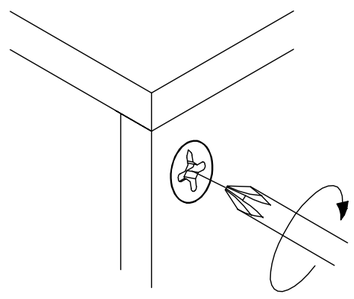

(5)

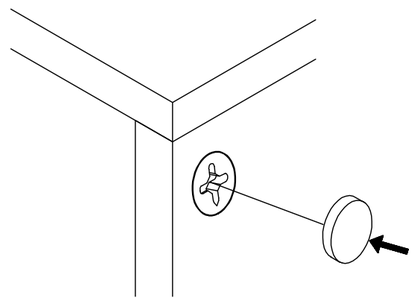

## HORIZONTAL CONNECTION

(1)

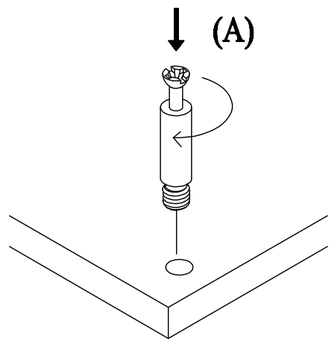


(2)

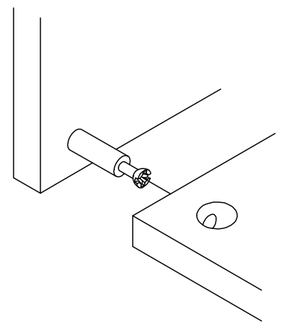

(3)

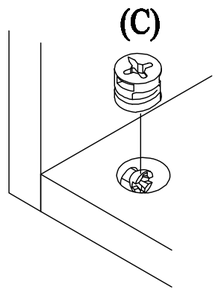


(4)

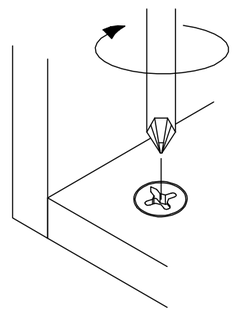

(5)

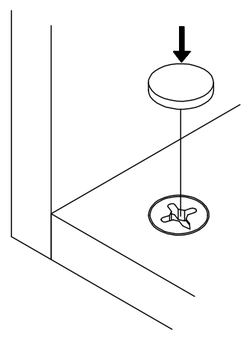

# HARDWARE LIST

| | | | | |
|---|---|---|---|---|
| WOOD DOWEL<br>28 PCS<br>  <br>(1) | CAM BOLT<br>CAM-LOCK<br>14 SETS<br>  <br>(2) | ROUND HEAD BOLT<br>FLAT WASHER<br>9 SETS<br>  <br>(3) | ROUND HEAD SCREW<br>41 PCS<br>  <br>(4) | SHELF HOLDER<br>16 PCS<br> 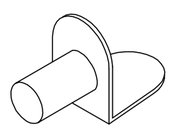 <br>(5) |
| KNOB<br>ROUND HEAD BOLT<br>6 SETS<br> 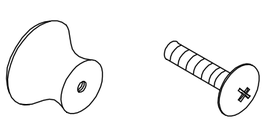 <br>(6) | HINGE<br>FLAT HEAD SCREW<br>12 SETS<br> 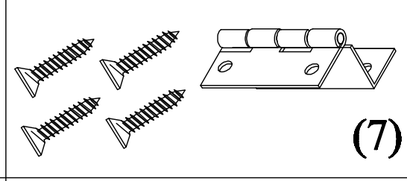 <br>(7) | IRON SLICE<br>FLAT HEAD SCREW<br>6 SETS<br> 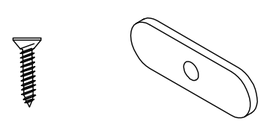 <br>(8) | VELVET HOLE COVER<br>6 PCS<br> <br>(9) | MAGNET LOCK<br>FLAT HEAD SCREW<br>2 SETS<br> 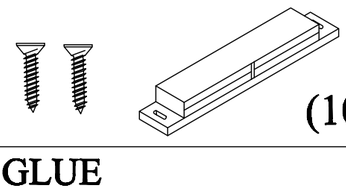 <br>(10) |
| MAGNET LOCK<br>FLAT HEAD SCREW<br>2 SETS<br> 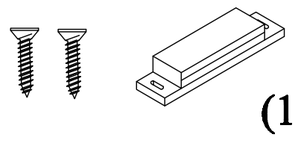 <br>(11) | TILTING PREVENT HARDWARE<br>2 SETS<br> 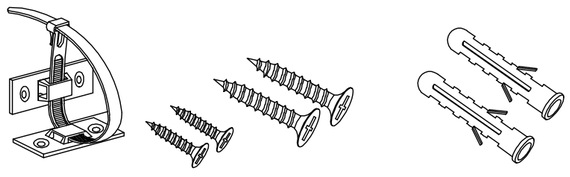 <br>(12) | ALLEN KEY<br>1 PC<br>  <br>(13) | GLUE<br>1 PC<br> 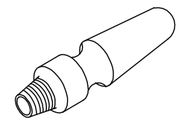 <br>(14) | |

# PARTS LIST

| | | |
|---|---|---|
| BOTTOM PANEL<br>1 PC<br> 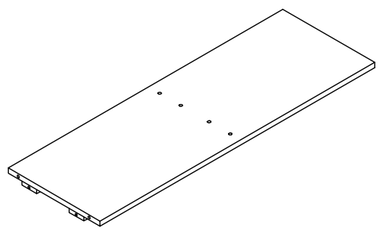 <br>A | ACROSS BAR<br>1 PC<br> 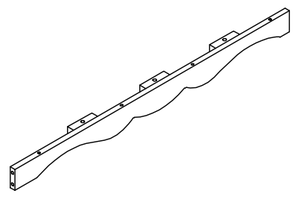 <br>B | MIDDLE PANEL<br>1 PC<br>  <br>C |
| LEFT SIDE PANEL<br>1 PC<br>  <br>D | RIGHT SIDE PANEL<br>1 PC<br>  <br>E | SHELF<br>1 PC<br> 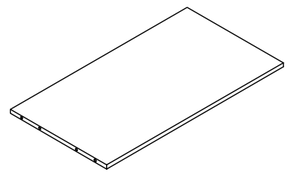 <br>F |
| SHELF<br>1 PC<br> 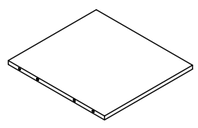 <br>G | TOP PANEL<br>1 PC<br> 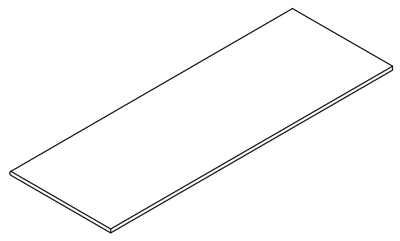 <br>H | DOOR<br>2 PCS<br> 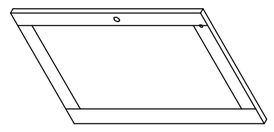 <br>I |
| DOOR<br>2 PCS<br> 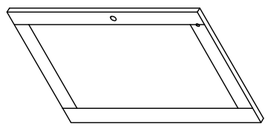 <br>J | DOOR<br>2 PCS<br> 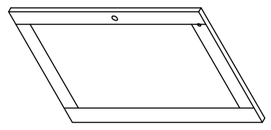 <br>K | SHELF<br>2 PCS<br> 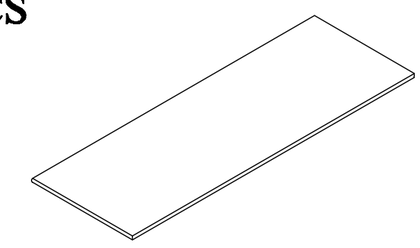 <br>L |
| SHELF<br>2 PCS<br> 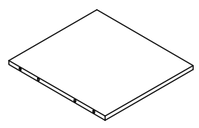 <br>M | BACK PANEL<br>1 PC<br> 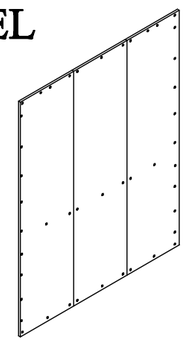 <br>N | ADJUSTABLE FOOT<br>1 PC<br>  <br>O |
| | | |
| | | |

STEP 1: ASSEMBLE BOTTOM PANEL (A) AND ACROSS BAR (B)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD BOLT & FLAT WASHER (3) TO ATTACH BOTTOM PANEL (A) AND ACROSS BAR (B) TOGETHER BY ALLEN KEY (13).

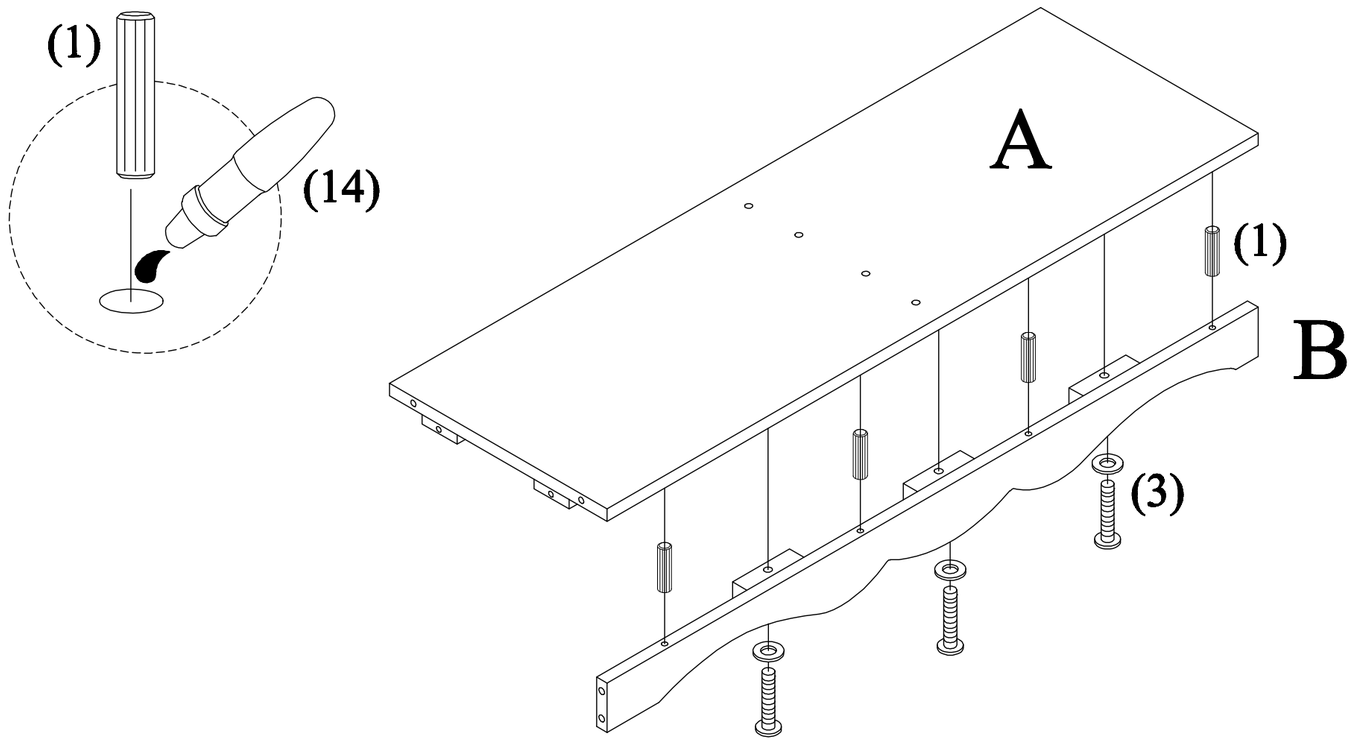


STEP 2: ASSEMBLE MIDDLE PANEL (C) AND ADJUSTABLE FOOT (O)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD BOLT & FLAT WASHER (3) TO ASSEMBLE BOTTOM PANEL (A) AND MIDDLE PANEL (C), THEN ATTACH ADJUSTABLE FOOT (O) ONTO BOTTOM PANEL (A) AS SHOWN.

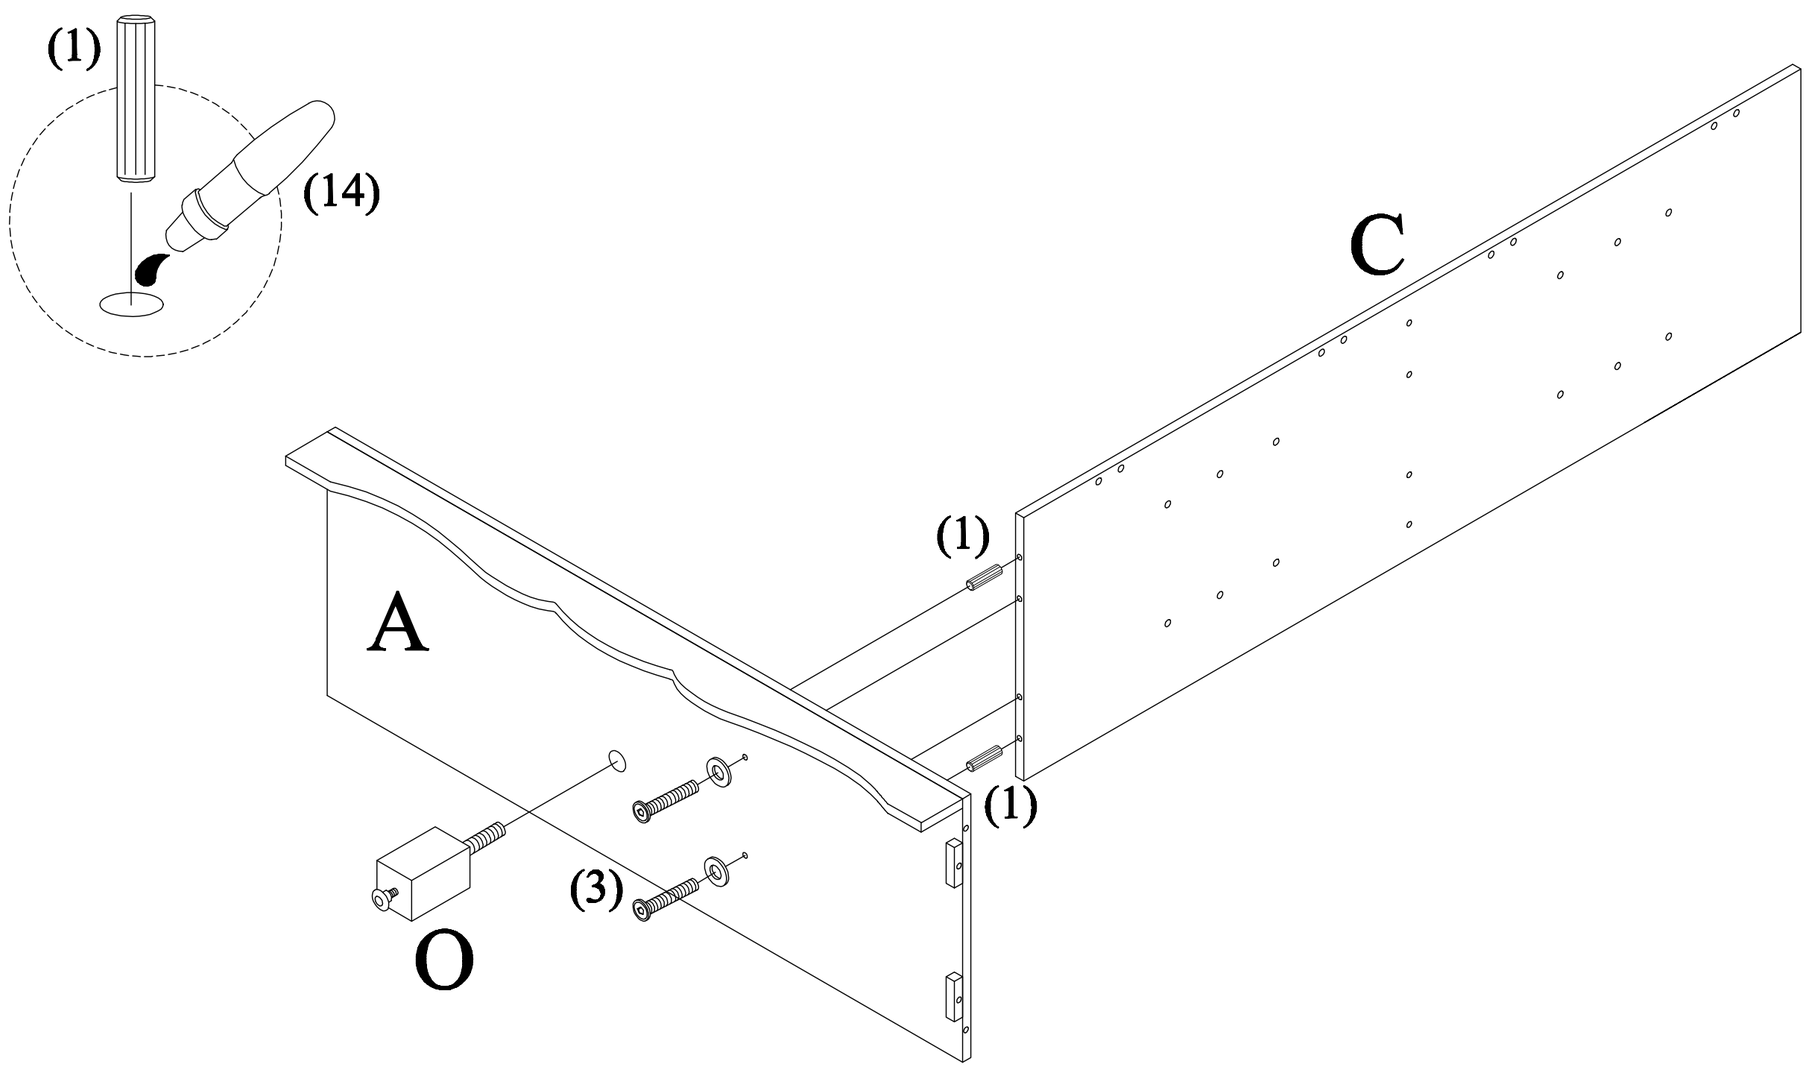

STEP 3: ASSEMBLE SIDE PANEL (D) AND SHELF (F)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD BOLT & FLAT WASHER (3) AND CAM BOLT & CAM LOCK (2) TO ASSEMBLE BOTTOM PANEL (A), MIDDLE PANEL (C), SHELF (F) AND SIDE PANEL (D) TOGETHER.

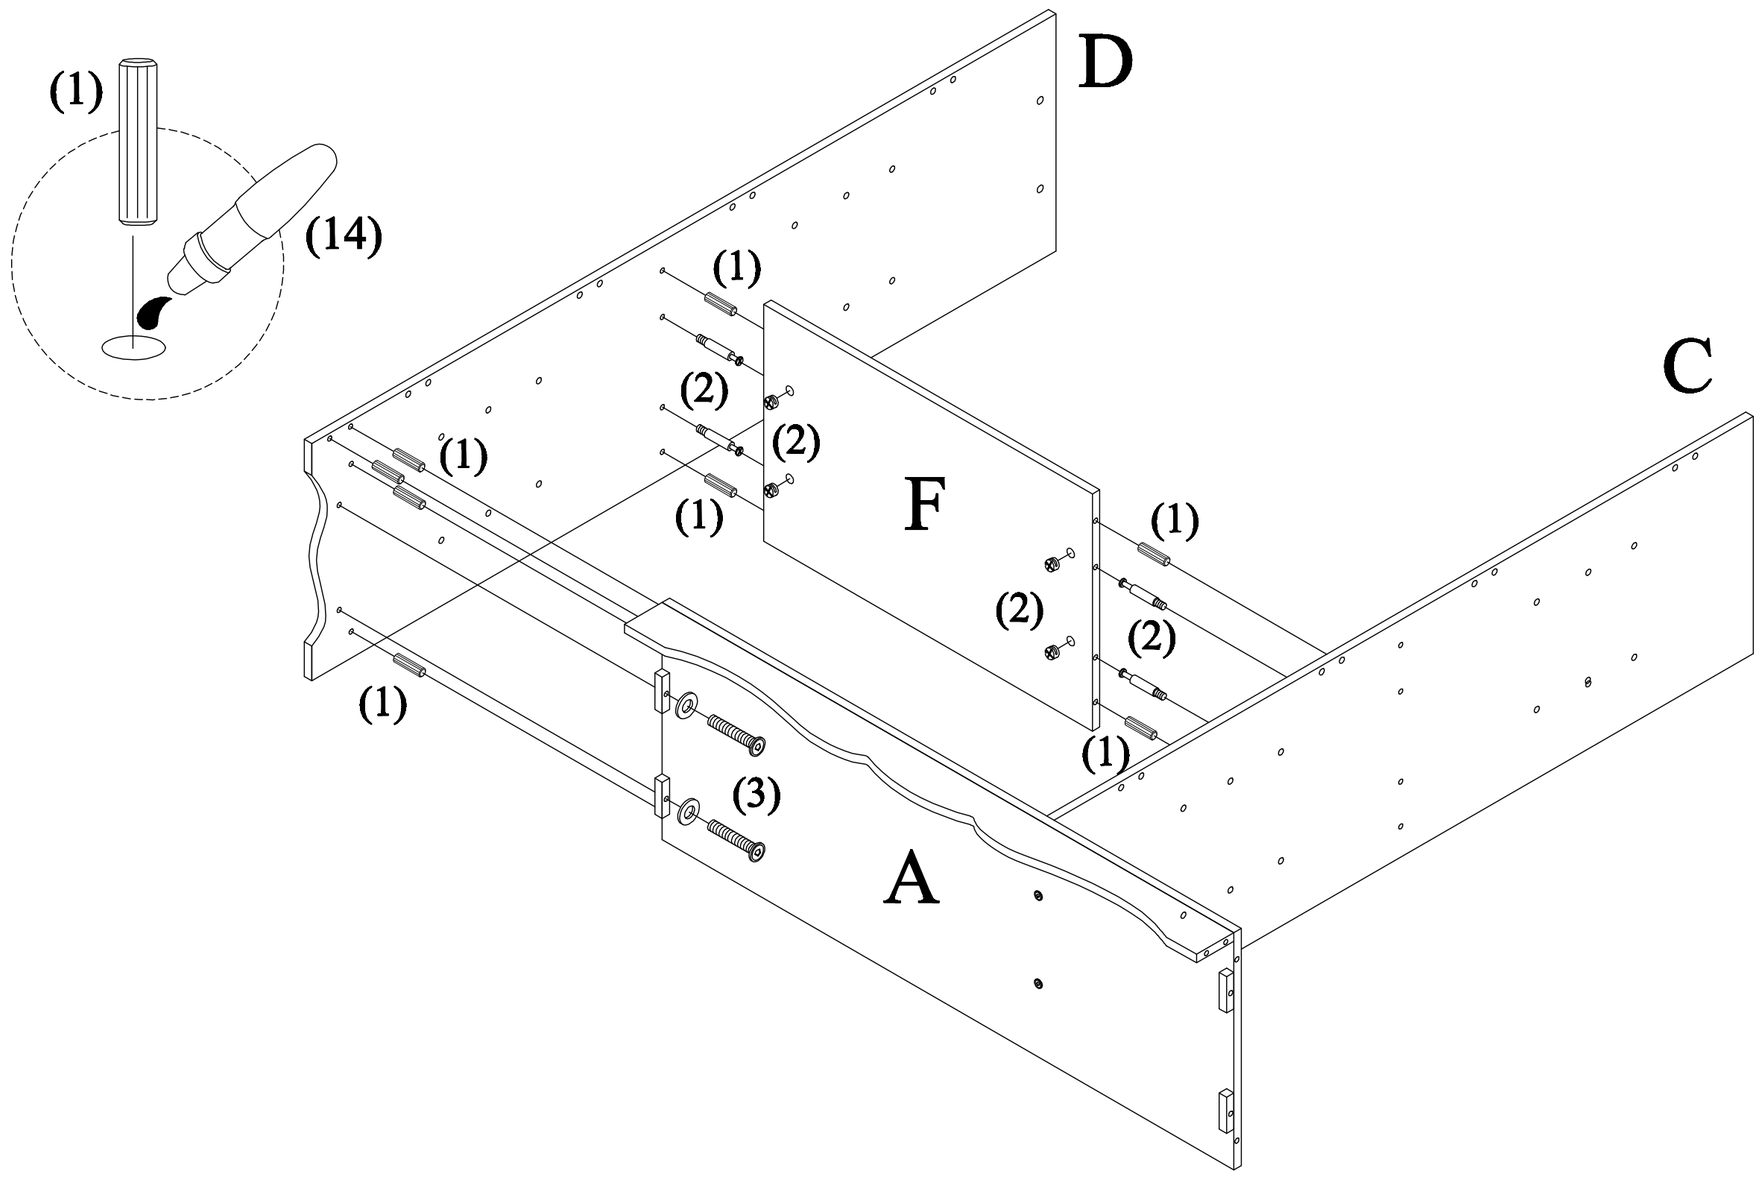


STEP 4: ASSEMBLE SIDE PANEL (E) AND SHELF (G)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD BOLT & FLAT WASHER (3) AND CAM BOLT & CAM LOCK (2) TO ASSEMBLE BOTTOM PANEL (A), MIDDLE PANEL (C), SHELF (G) AND SIDE PANEL (E) TOGETHER.

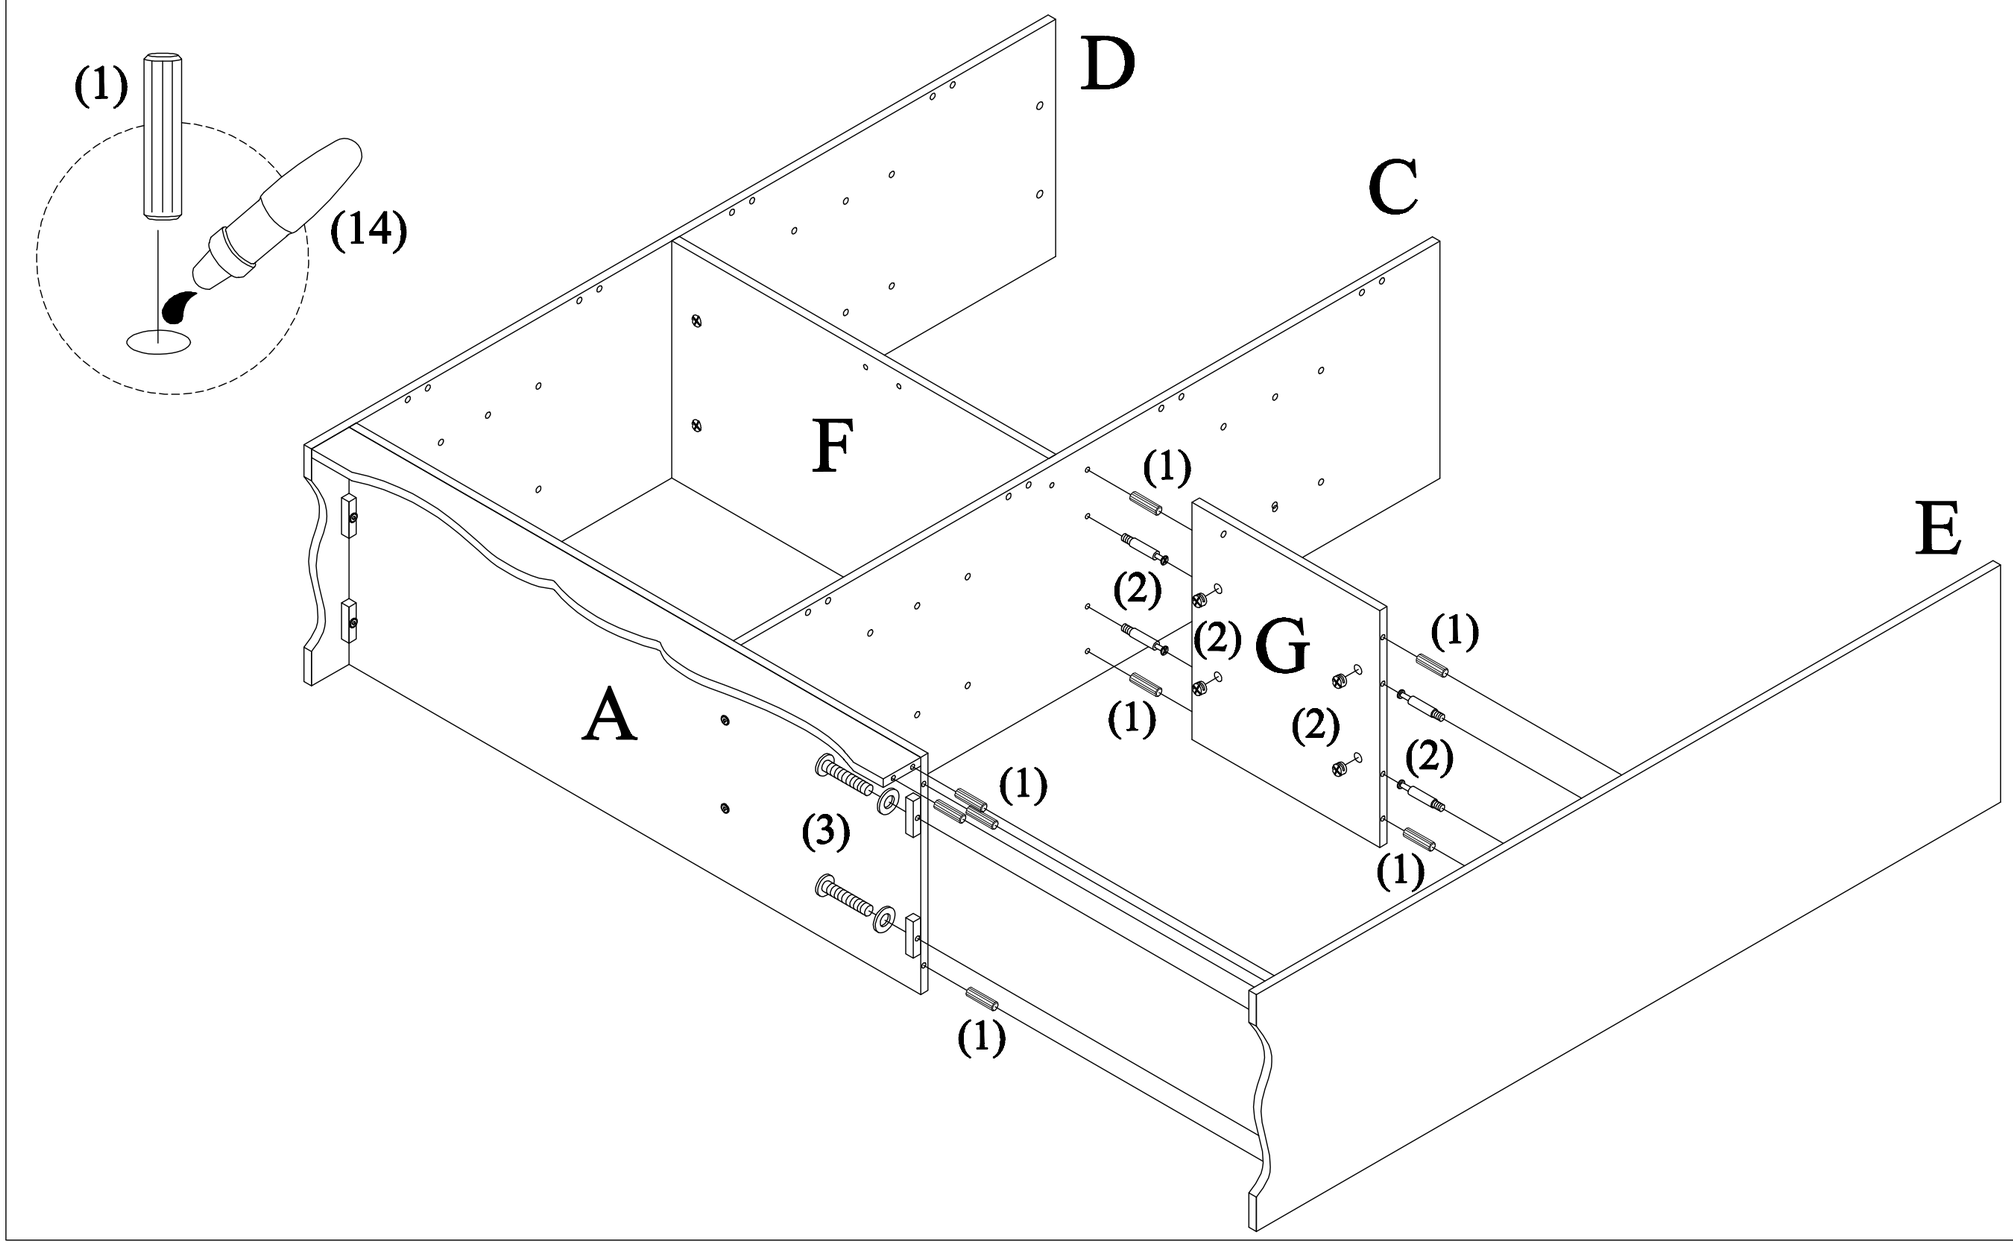

STEP 5: ASSEMBLE TOP PANEL (H) AND MAGNET LOCK (10) & (11)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE CAM BOLT & CAM LOCK (2) TO ASSEMBLE TOP PANEL (H), SIDE PANEL (D & E) AND MIDDLE PANEL (C) TOGETHER.
- USE FLAT HEAD SCREW (10) & (11) TO ATTACH MAGNET LOCK (10) & (11) ONTO TOP PANEL (H) AND SHELF (F & G).
- USE THE VELVET HOLE COVER (9) TO COVER THE CAM-LOCK HOLES AS SHOWN.

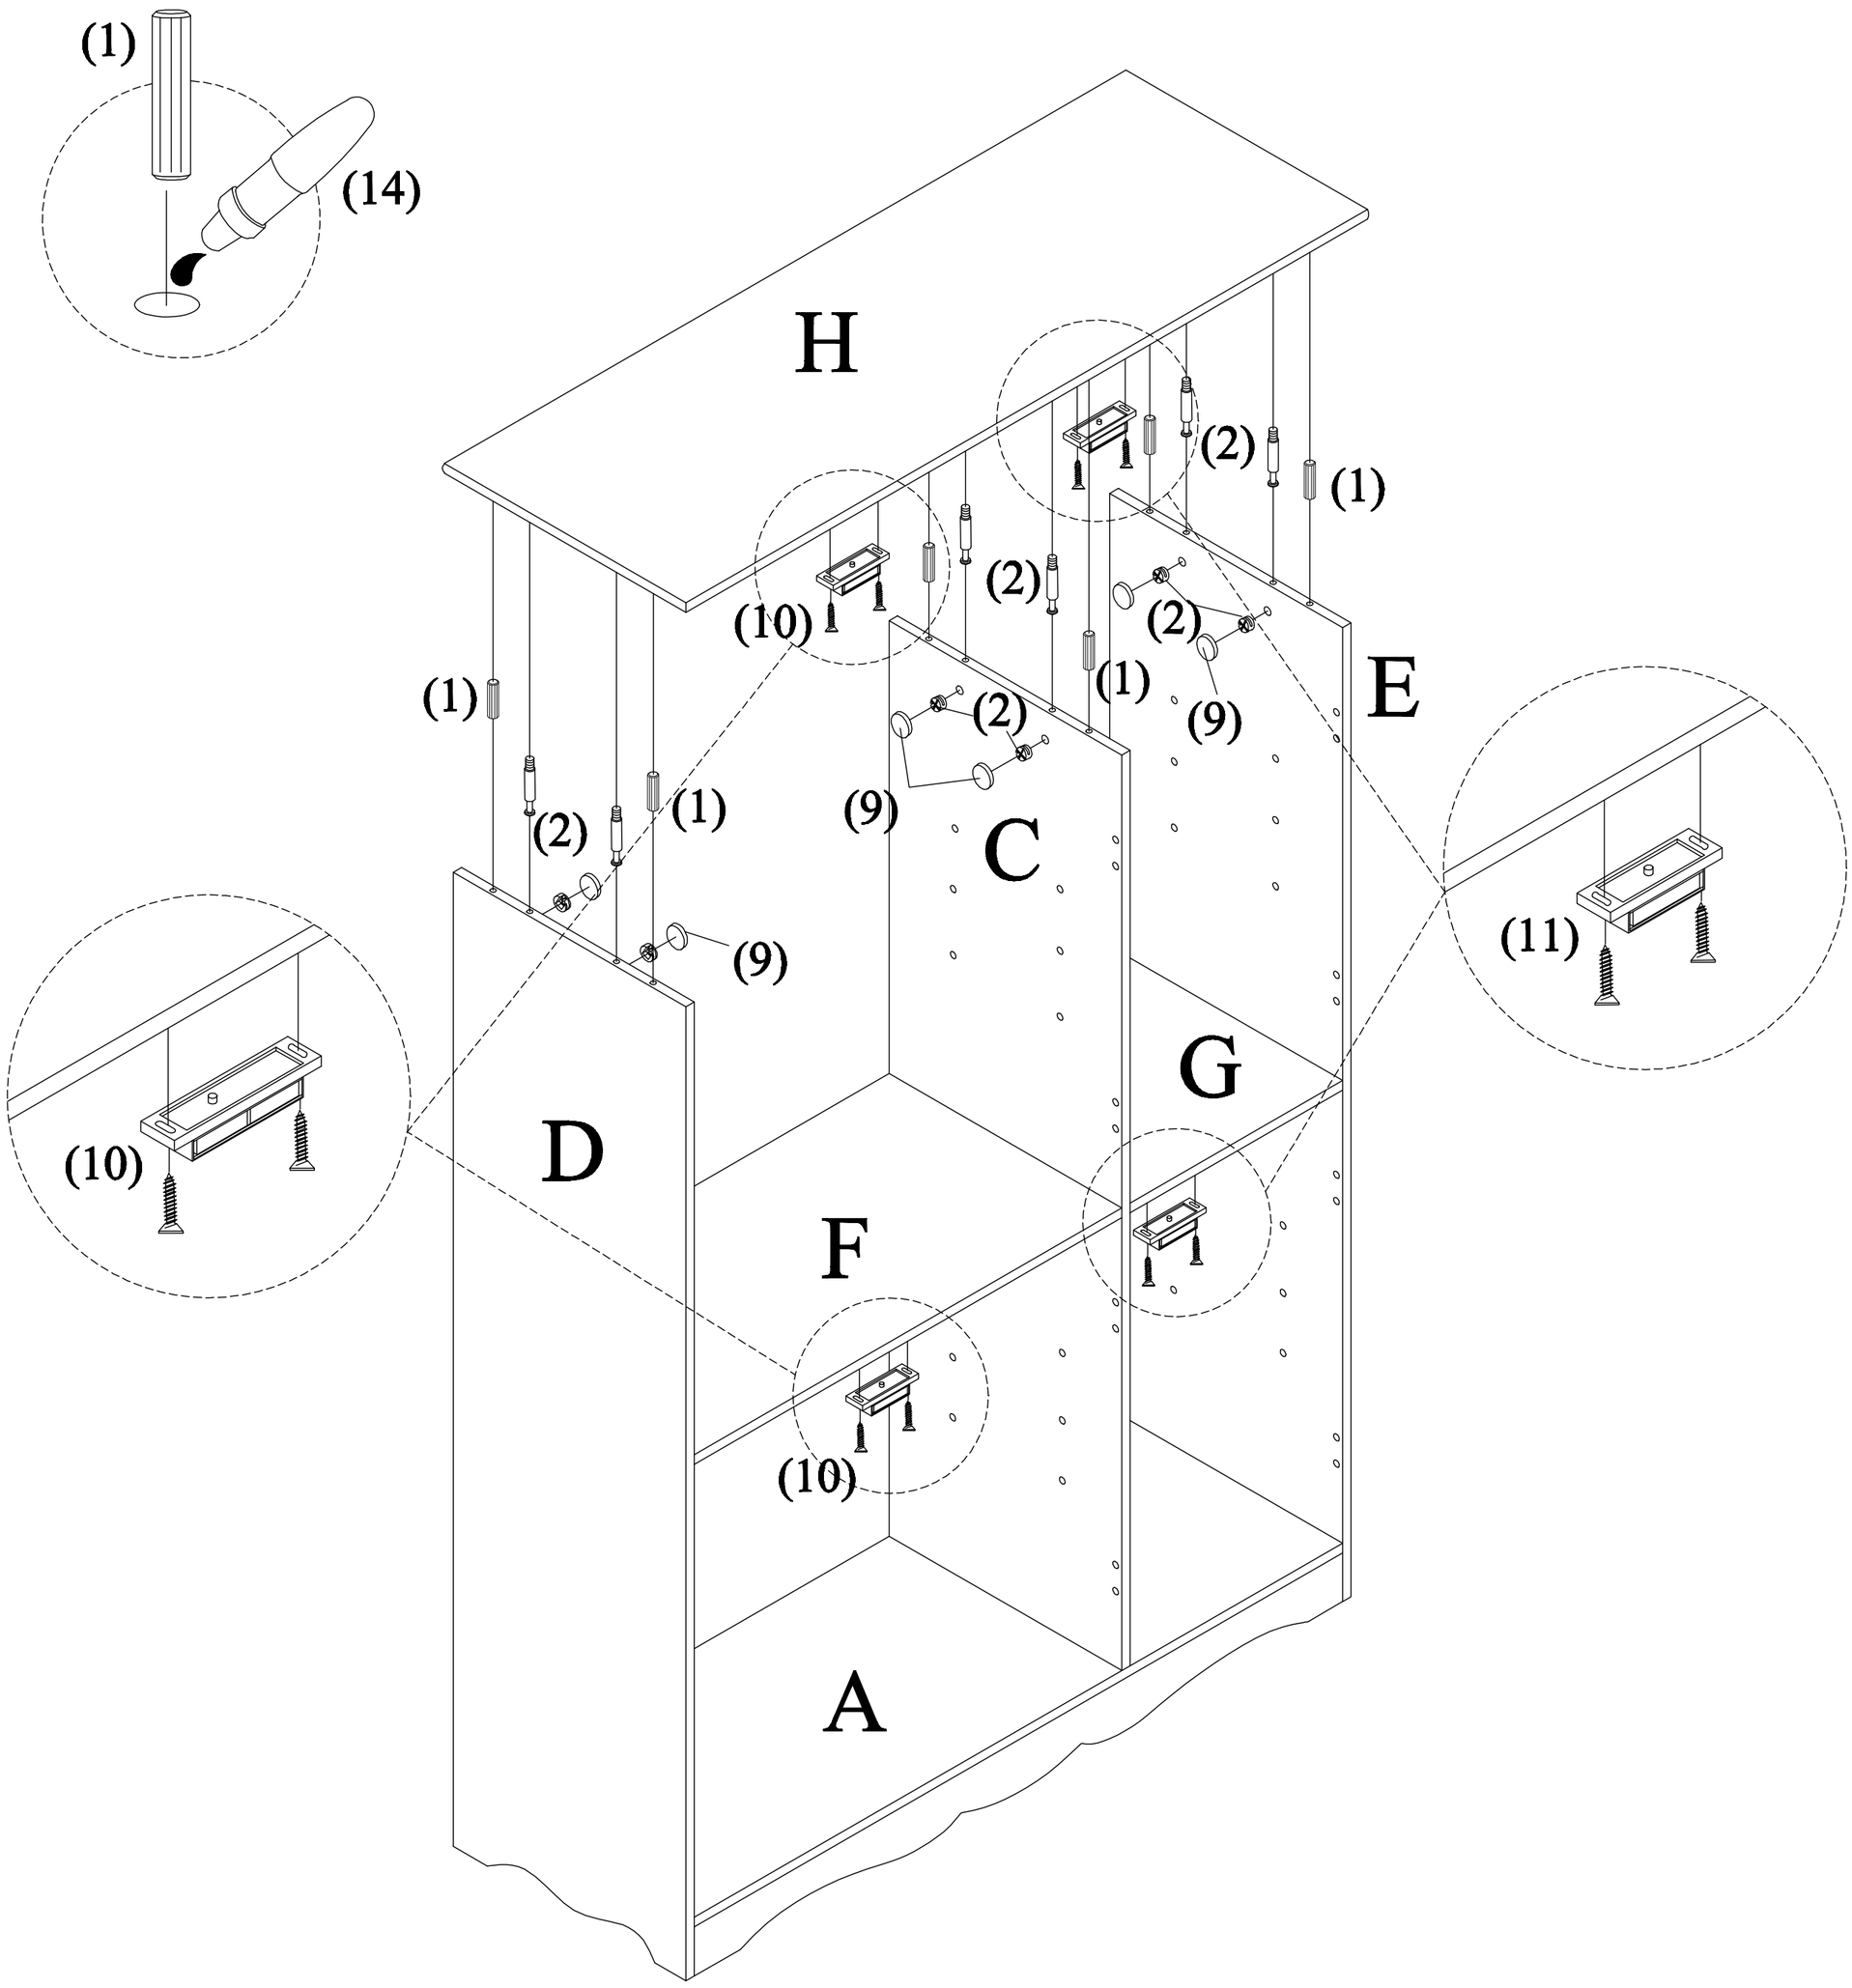

STEP 6: PLACE SHELF (L & M)

- INSERT SHELF HOLDERS (5) INTO THE HORIZONTAL HOLES INSIDE OF SIDE PANEL (D & E) AND MIDDLE PANEL (C), THEN PUT SHELF (L & M) ON THE RELEVANT SHELF HOLDERS.

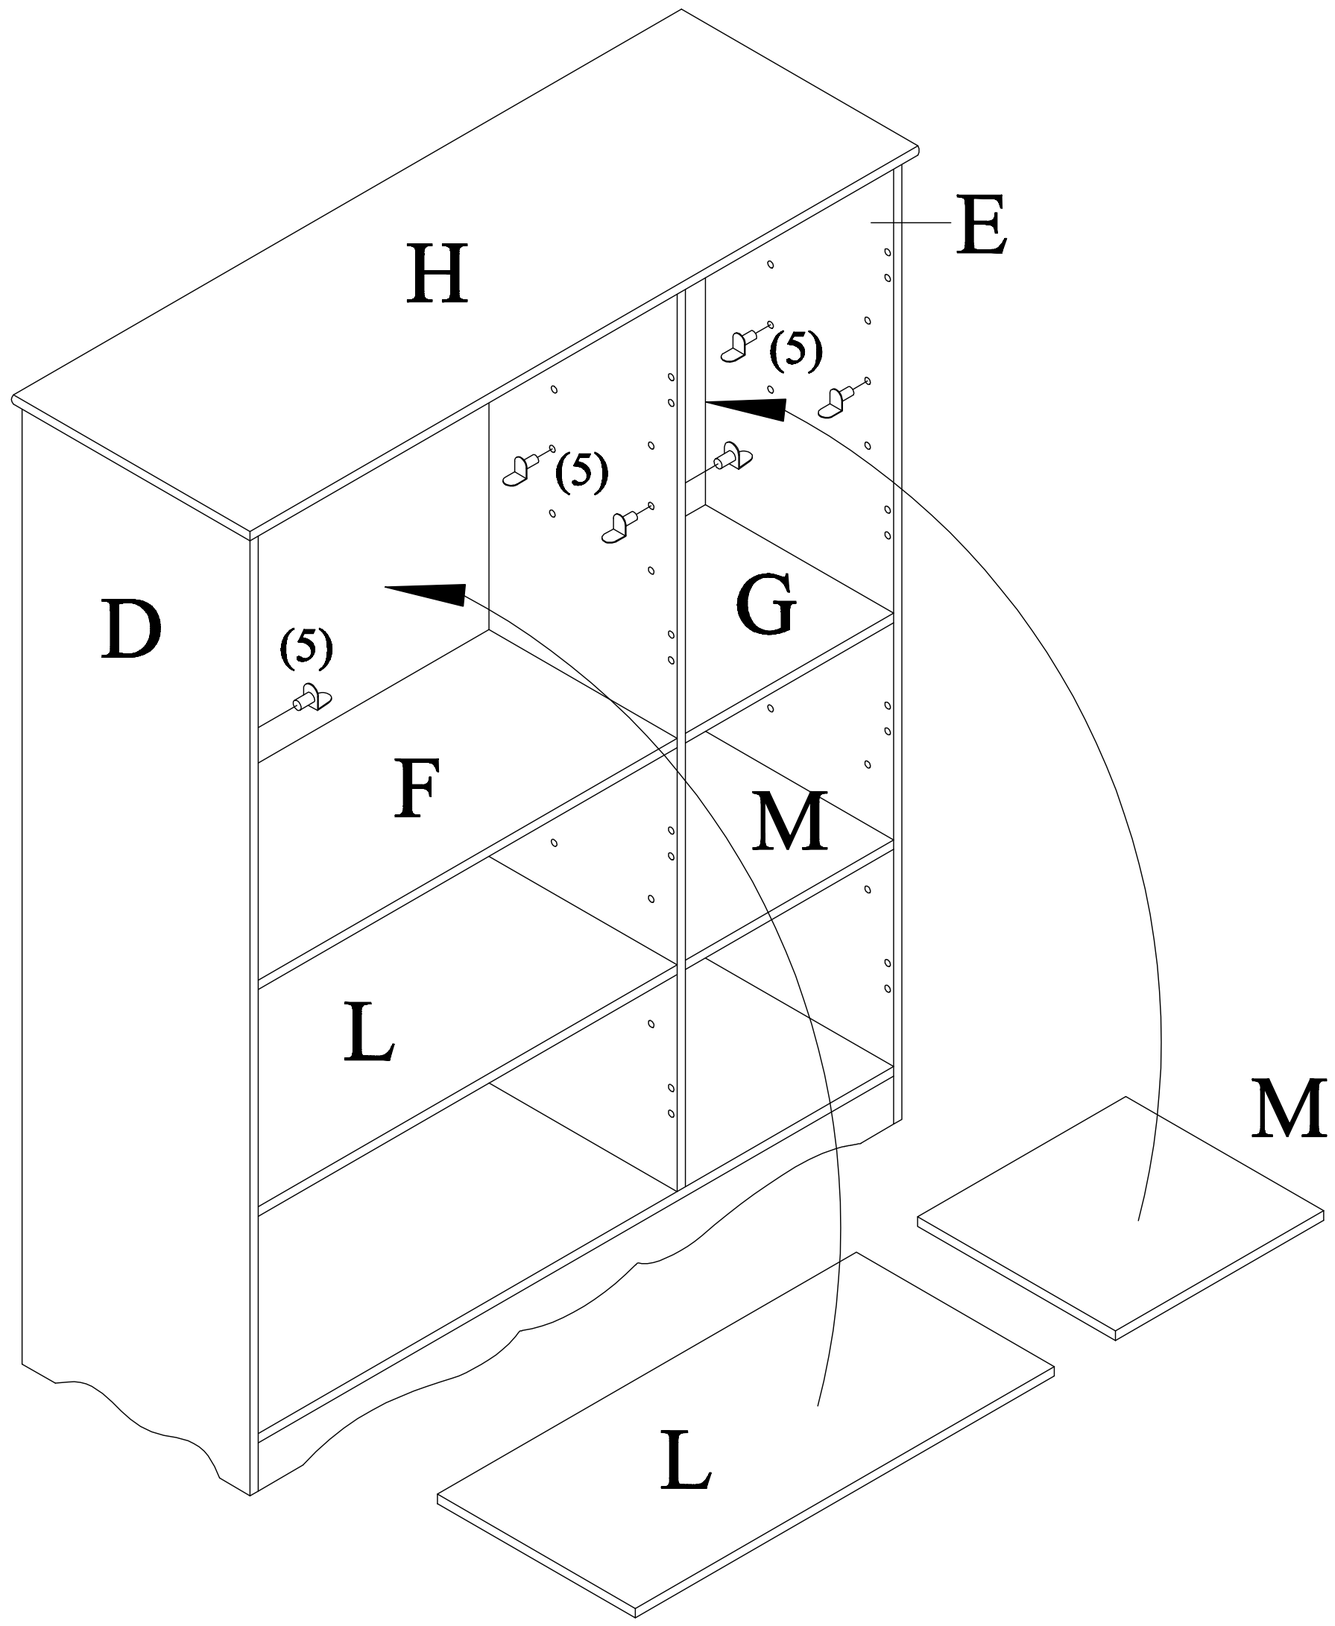


STEP 7: ASSEMBLE KNOB (6) AND IRON SLICE (8)

- USE ROUND HEAD BOLT (6) TO ATTACH KNOB (6) ONTO DOOR (I & J & K).
- USE FLAT HEAD SCREW (8) TO ATTACH IRON SLICE (8) ONTO DOOR (I & J & K) AS SHOWN.

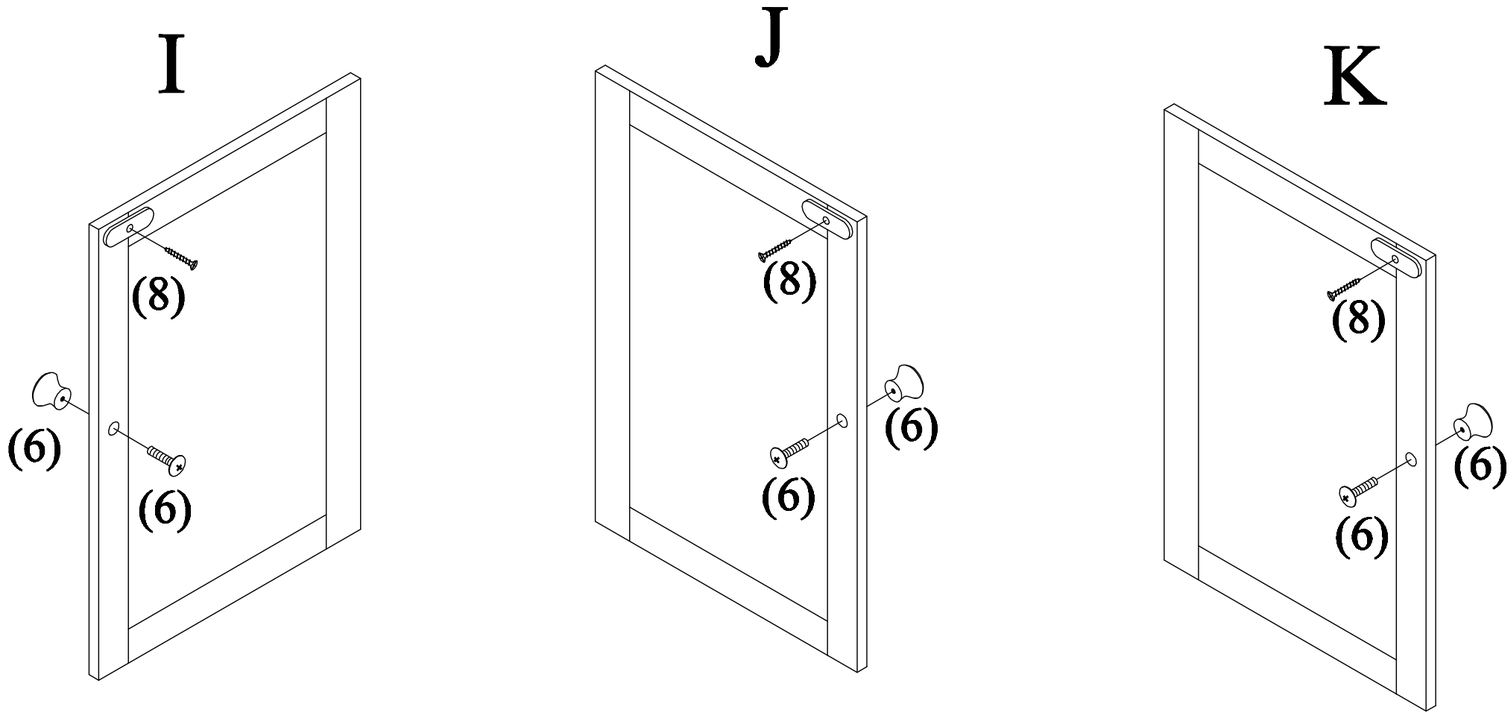

STEP 8: ASSEMBLE DOOR (I & K)

- USE FLAT HEAD SCREW (7) AND HINGE (7) TO ATTACH DOOR (I & K) ONTO SIDE PANEL (D & E) AS SHOWN.

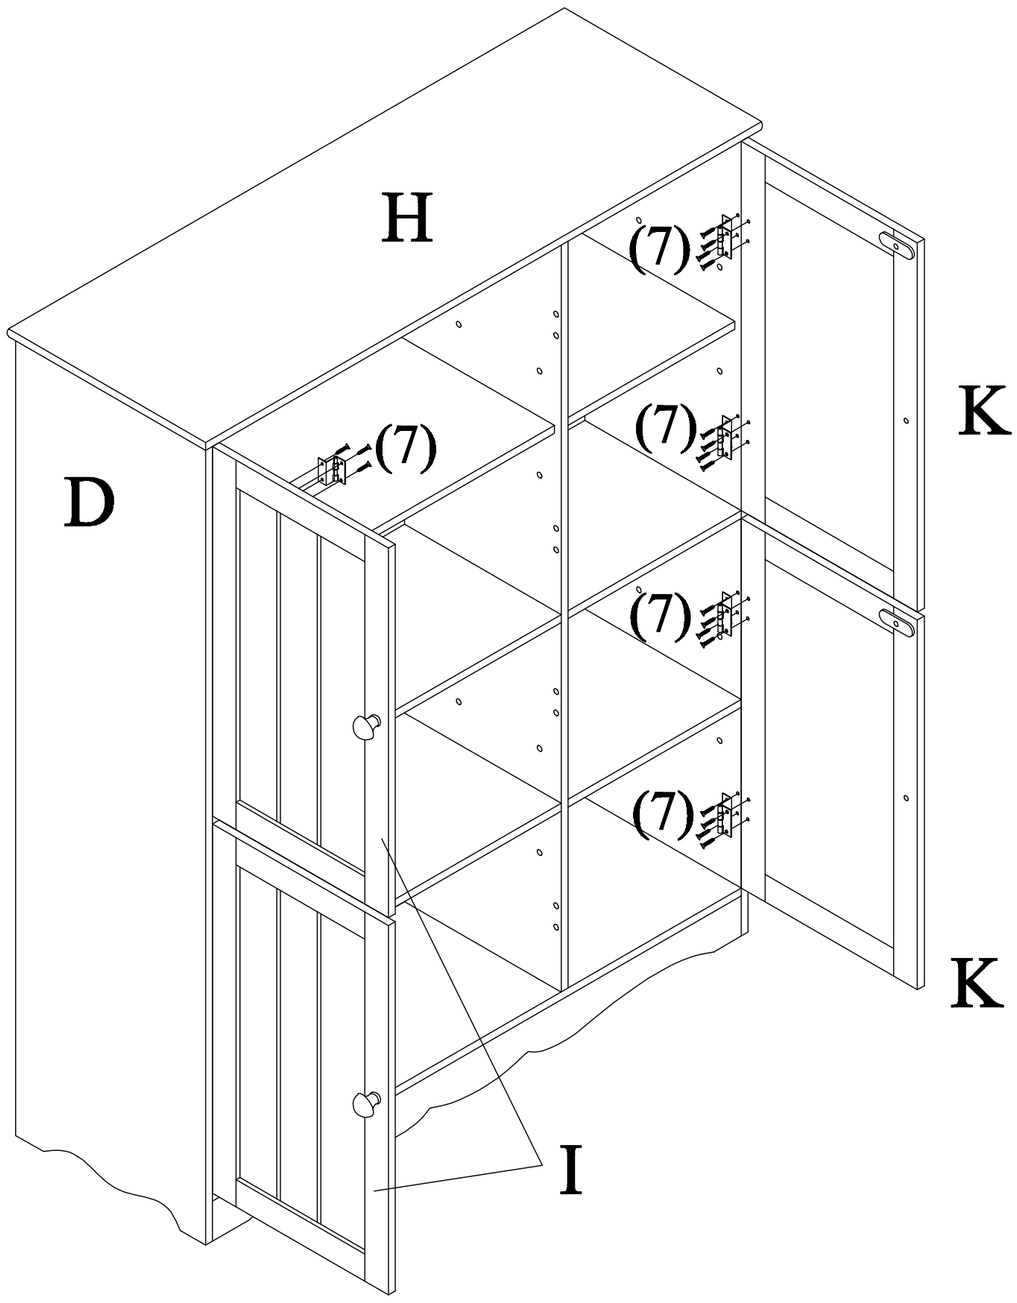


STEP 9: ASSEMBLE DOOR (J)

- USE FLAT HEAD SCREW (7) AND HINGE (7) TO ATTACH DOOR (J) ONTO MIDDLE PANEL (D & E) AS SHOWN.

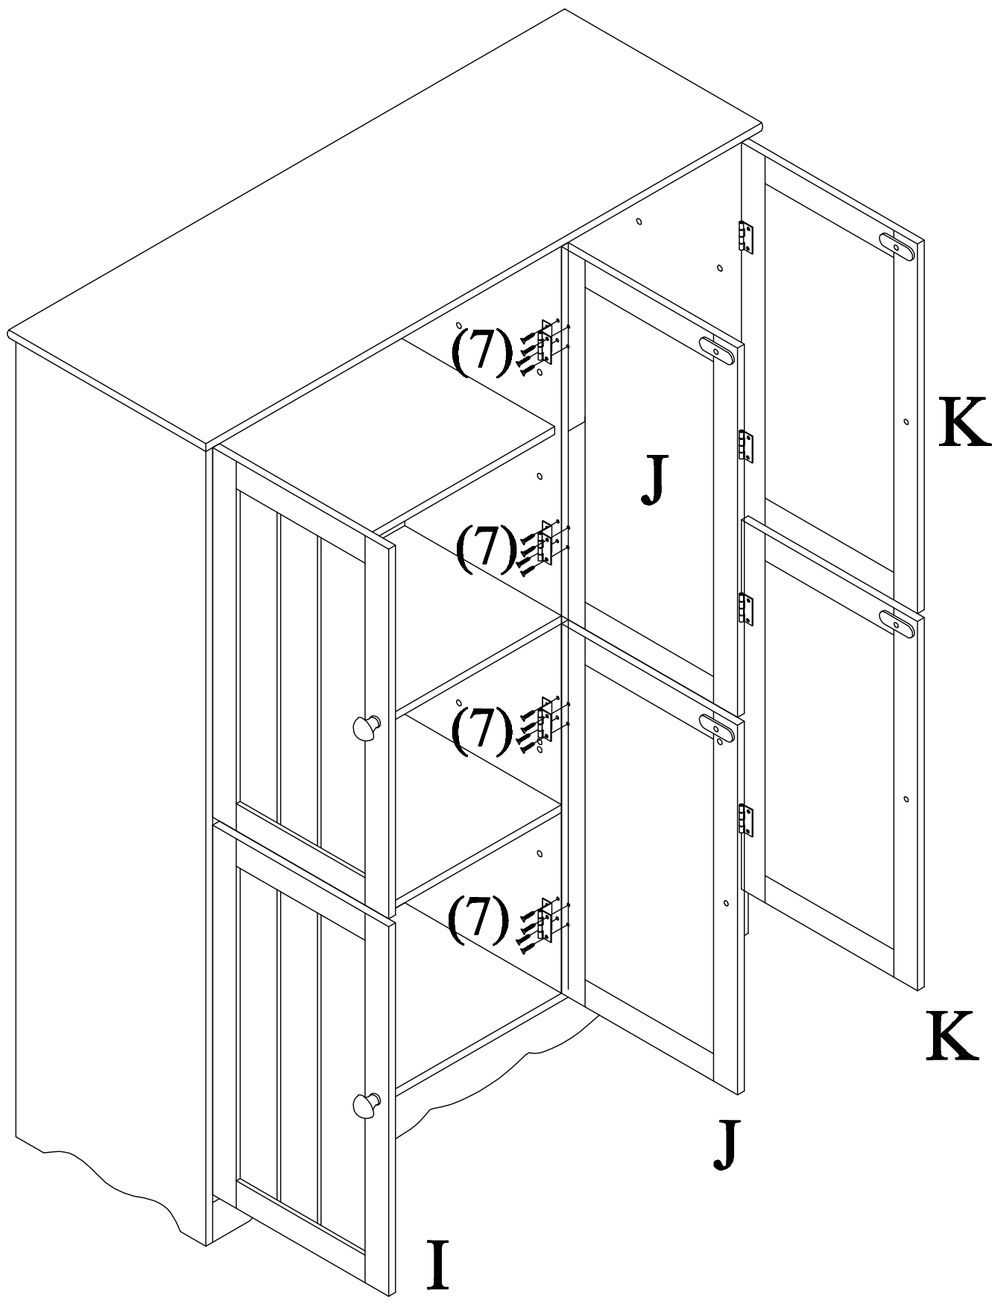

STEP 10: ASSEMBLE BACK PANEL (N)

• USE ROUND HEAD SCREW (4) TO ATTACH BACK PANEL (N) ON THE BACK OF PRE-ASSEMBLED UNIT.

NOTE: BEFORE YOU ASSEMBLE THE BACK PANEL, PLEASE MAKE SURE THE 2 SIDE PANELS HAVE AN EVEN GAP BETWEEN THEM. IF UNEVEN, SHIFT THE SIDE PANELS UNTIL EVENLY SPACED, THEN ATTACH BACK PANEL.

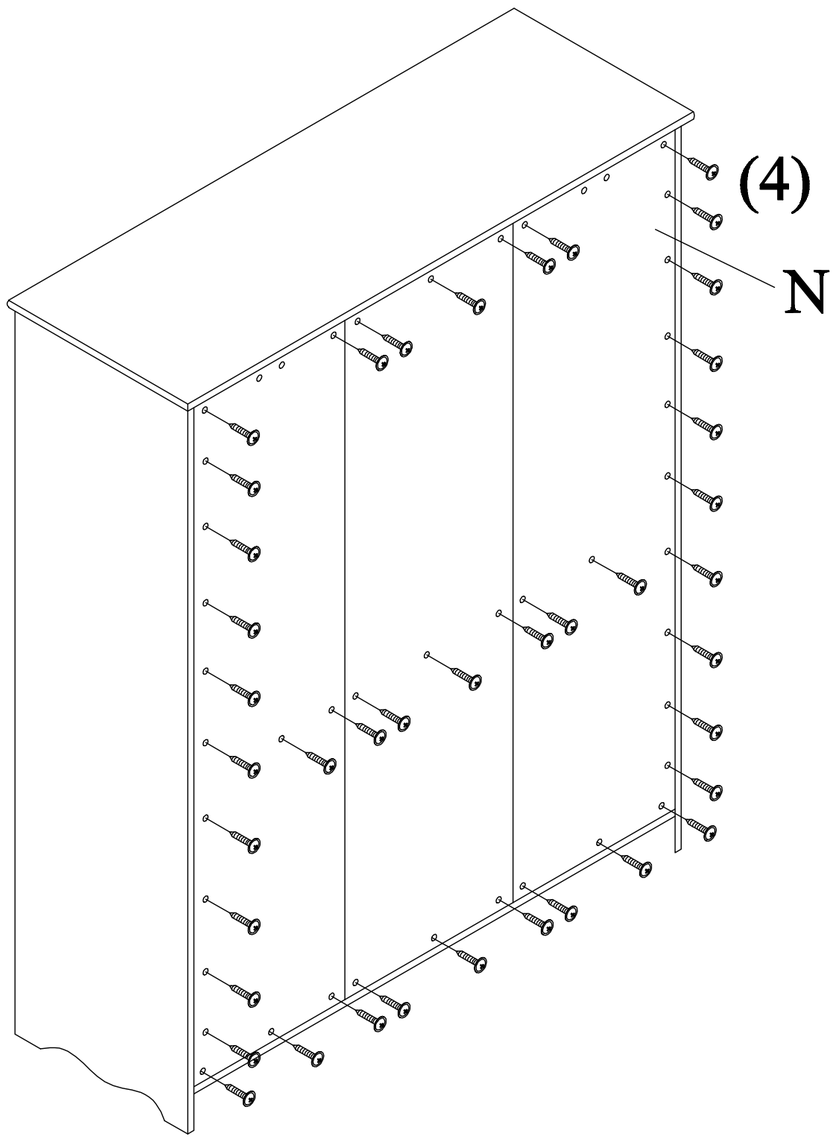


STEP 11: ASSEMBLE PREVENT DEVICE (12)

• USE ELECTRIC DRILL TO DRILL 4 SMALL HOLES ON THE DESIRED LOCATION OF WALL, INSERT 4 GECKOS INTO THE 4 HOLES BY RUBBER MALLET, USE TWO LONG SCREWS TO ATTACH ONE PLASTIC SLICE ONTO WALL, THEN USE TWO SHORT SCREWS TO ATTACH ANOTHER PLASTIC SLICE ON THE BACK OF PRE-ASSEMBLED PRODUCT.

• USE THE PLASTIC ROPE TO LINK THE PRODUCT AND WALL TOGETHER.